

Warranty & Support

This product is provided with a one year warranty for problems found during normal usage.

Mistreating the Interactive Wall Chart or opening the case for reasons other than to replace the batteries will invalidate this warranty.

Made in China, on behalf of the TTS Group LTD.

Technical Support

Please visit www.tts-group.co.uk for the latest product information.

Email: feedback@tts-group.co.uk for technical support.

TTS Group Ltd., Park Lane Business Park, Kirkby-in-Ashfield, Nottinghamshire, NG17 9GU, UK.

Freephone: 0800 318686 Freefax: 0800 137525



WARNING: Do not dispose of this product in household waste. Hand it over to a collection point for recycling electronic appliances.



WARNING! Not suitable for children under 36 months due to small parts – choking hazard.



TTS Group Ltd., Park Lane Business Park,
Kirkby-in-Ashfield, Nottinghamshire, NG17 9GU, UK



TTS is part of the RM group

0800 318 686

www.tts-shopping.com

Product Code: PS00407 – Interactive Wall Chart



INTERACTIVE WALL™



- ✓ Place items in pocket & record
- ✓ Whole class resource
- ✓ Cross-curricular

30 Recording
pockets - ten
seconds each

USER GUIDE



TTS is part of the RM group

Important Information

Please read all instructions carefully before use.

- Please retain these instructions for future reference, as they contain important information.
- All cleaning should be carried out by an adult.
- Ensure the product is switched off before cleaning begins.
- To clean the Interactive Wall Chart wipe with a damp cloth.



Safety Warnings

- Batteries should be fitted by an adult.
- Use batteries of the same type.
- Do not mix new and old batteries; replace all batteries at the same time.
- Do not mix rechargeable and non-rechargeable batteries.
- Do not allow batteries to come into contact with liquids at any time.
- All batteries should be removed from the product for long periods of storage.

Fitting & Replacing Batteries

1. Your Interactive Wall Chart uses 3 x 1.5V AAA batteries which are user replaceable.
2. Batteries must be inserted with the correct polarity as indicated in the battery compartment.
3. Remove the battery cover with a screwdriver.
4. Remove the exhausted batteries, and dispose of responsibly.
5. Replace the battery cover, and tighten screws.

Know your Interactive Wall Chart

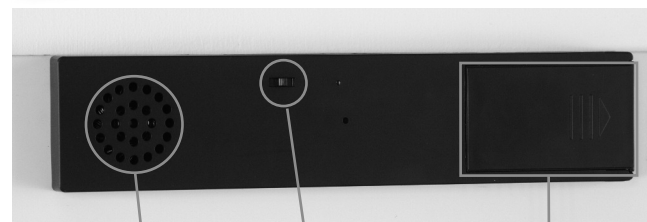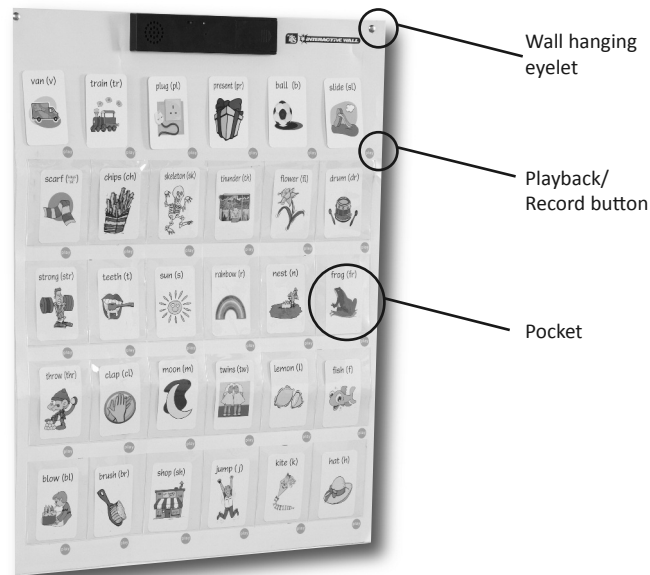

Speaker

 
Rec/Off/Play

battery hatch

Recording and Playback on your Interactive Wall Chart

Recording


1. Slide the Rec/Off/Play switch on the speaker module to Rec.
2. Choose a 'tile' to record a message into.
3. Press and hold the green Rec/Play button for the tile you want a message to be recorded into.
4. Speak clearly into the microphone.
5. Release the green Rec/Play button. Each Tile can record up to 10 seconds.
6. Each subsequent message will record over the message before it.

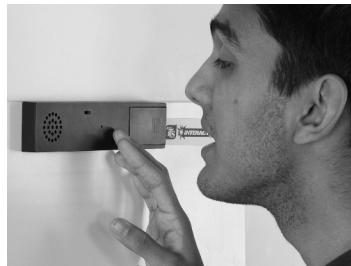

Playback

1. Slide the Rec/Off/Play switch on the speaker module of the wall chart to play.
2. Press a play button once to hear the recorded message.


Move the switch to the "Off" position when not in use to conserve the batteries.

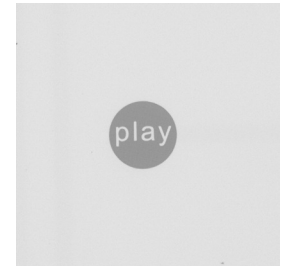

Interactive Wall Chart Additional Features

The Interactive Wall Chart has 30 recordable tiles; each tile has a hardwearing pocket H75 x W75mm to allow content to be inserted.

The Interactive Wall Chart has keyholes and eyelets to allow the item to be wall mounted.

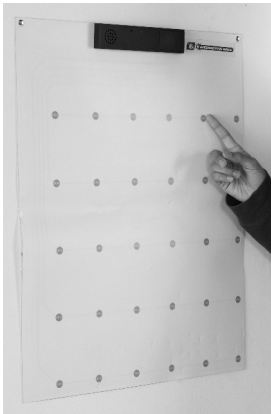

Technical Specification

Feature	Specification
Battery Type	3 x 1.5V AAA batteries
Battery Life (Playback mode)	500 plays approx(depending on length)
Battery Life (Recording mode)	1000 recordings approx (depending on length)
Recording time	10 seconds (per pocket)

Troubleshooting

Question	Answer
Interactive Wall Chart will not record sounds.	Ensure the slide switch is in record mode.
	Ensure that the batteries are fresh, and are inserted correctly.
Interactive Wall Chart will not playback recordings.	Ensure the slide switch is in play mode.
	Ensure that the batteries are fresh, and are inserted correctly.