
## Lap Cabby Loading Instructions

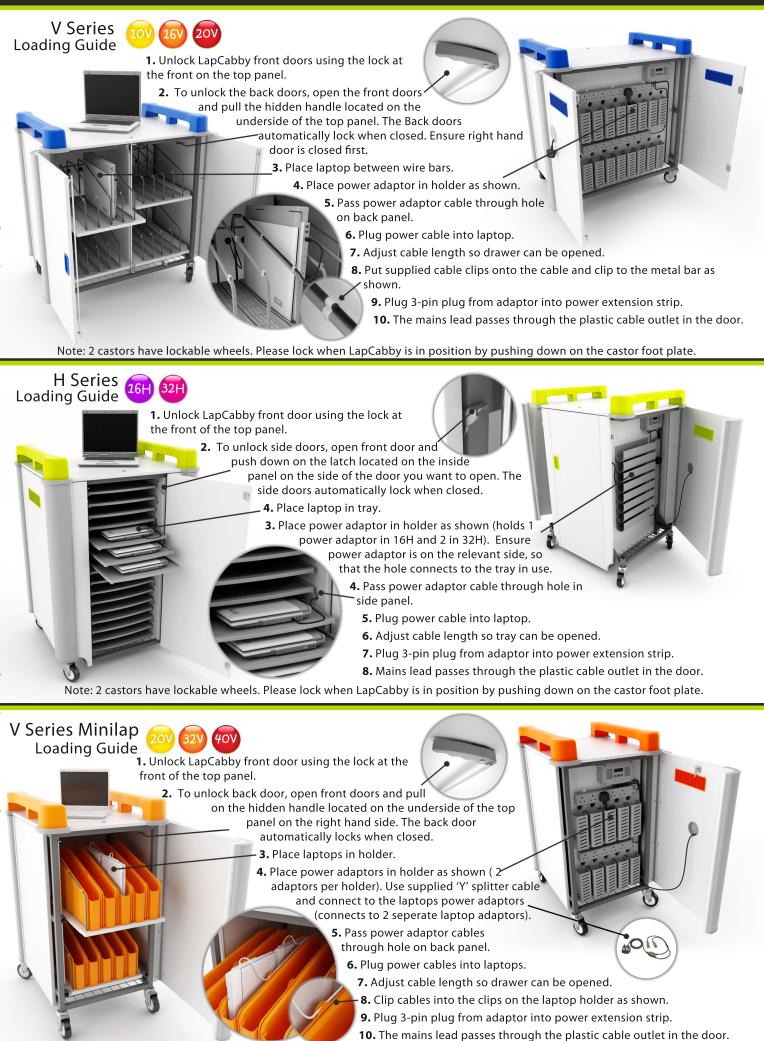

Note: 2 castors have lockable wheels. Please lock when LapCabby is in position by pushing down on the castor foot plate.

maryict.co.uk

WWW.D

Primary ICT Ltd