



SEE N SPEAK™



Recordable
Magnifiers

✓ Robust

✓ Easy to use

USER GUIDE

Contents

Care instructions	3
Fitting & Replacing Batteries	3
See 'N' Speak Recording and Playback	4
See 'N' Speak Features	5
Technical Specification	6
Troubleshooting	7
Warranty & Support	8

Please retain these instructions for future reference.

This unique, recording magnifier is perfect for focussing children on their observations without the pressure of writing and allows children to develop essential skills in a fun way. The wipeable insert on the handle allows the child to write on their name for easy identification of their recording.

The magnifier has a dual lens with 2 x and 4 x magnification and will record for up to 30 seconds.

Overall size:	L22cm x diameter 12cm
Lens size:	Diameter 9cm

Thank you to Shehnaz Vorajee, Lancashire, for this idea.

Care Instructions

- All cleaning should be carried out by an adult.
- Ensure the product is switched off before cleaning begins.
- To clean the See 'N' Speak case wipe gently with a clean, damp cloth.
- To clean the lens use warm soapy water, wipe away any excess suds and dry thoroughly.
- Do not allow the product to come into contact with any liquids during use.

Fitting and Replacing Batteries

- Your See 'N' Speak uses 2 x AAA batteries.
- Batteries must be inserted correctly as shown below.
- Remove the battery cover with a crosshead screwdriver.
- Fit batteries as shown.
- Replace the battery cover, and tighten screw.

1)




2)



Battery Warnings


- Batteries should be fitted by an adult.
- Use only batteries of the same type.
- Do not mix new and old batteries, replace all batteries at the same time.
- Do not mix rechargeable and non-rechargeable batteries.
- Ensure all used batteries are disposed of in the correct manner.

See 'N' Speak Recording and Playback

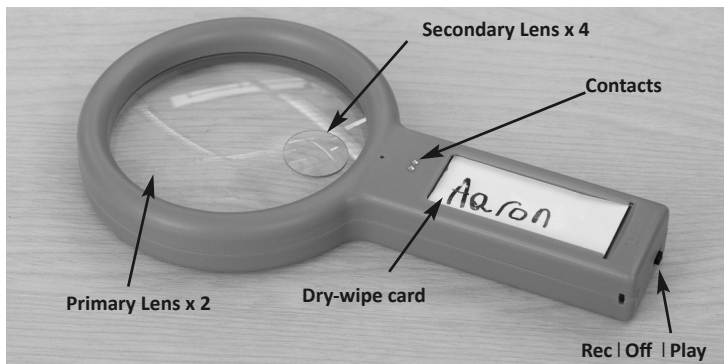


To record:

1. Move the slide switch to 'REC'.
2. Touch the contacts once to begin recording.
3. After the beep, speak for up to 30 seconds.
4. Touch the contacts a second time, to end the recording. See 'N' Speak will beep twice.
5. Subsequent recordings will record over the previous recording.

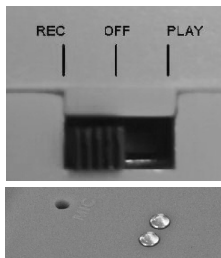


To playback:


1. Move the slide switch to 'PLAY'.
2. Touch the contacts once to begin playback.
3. See 'N' Speak will play the whole recording.
4. Touch the contacts again to stop playback.

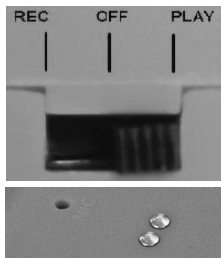

See 'N' Speak Features

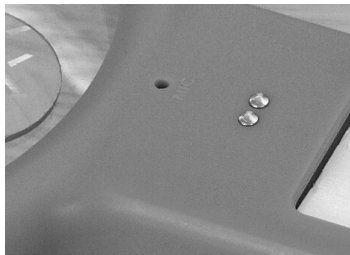

30 seconds recording time
Touch contacts to activate.

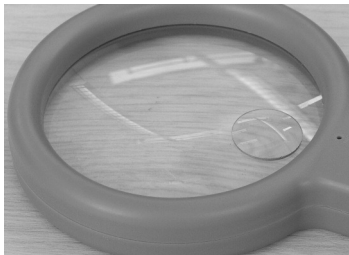

Dual lens, 2 and 4 x
magnifications



Dry wipe card slides out of the
handle.



Chunky and robust design.
Set of 6 in rainbow
colours.

Technical Specification

Feature	Specification
Battery type	2 x AAA 1.5V
Weight	200g
Dimensions	L22 x W12 x D2.5 cms
Battery life (Playback mode)	2000 plays (depending on length)
Battery life (Recording mode)	4000 recordings (depending on length)
Recording & playback length	30 seconds
Main lens magnification	x 2
Secondary lens magnification	x 4

Troubleshooting

Question	Answer
See 'N' Speak won't record sounds.	Ensure that the slide switch is set to 'REC'. Ensure that the batteries are fresh, and are inserted correctly.
See 'N' Speak won't playback recordings.	Ensure that the slide switch is set to 'PLAY'. Ensure that the batteries are fresh, and are inserted correctly.
Batteries are new, and the See 'N' Speak won't record or playback.	Ensure that the contacts are clean.



Warranty & Support

This product is provided with a one year warranty for problems found during normal usage. Mistreating the See 'N' Speak or opening the unit casing will invalidate this warranty. Any data stored on the unit and any consequences loss is not covered by this warranty. All out of warranty repairs will be subject to a replacement fee.

Technical Support

Please visit www.tts-group.co.uk for the latest product information.
Email: feedback@tts-group.co.uk for technical support.

TTS Group Ltd.
Park Lane Business Park
Kirkby-in-Ashfield
Nottinghamshire,
NG17 9GU, UK.

Freephone: 0800 318686
Freefax: 0800 137525



WARNING: Do not dispose of this product in household waste. Hand it over to a collection point for recycling electronic appliances.



WARNING! Not suitable for children under 36 months due to small parts. Choking hazard.

Made in China, on behalf of the TTS Group Ltd.



N448



*TTS Group Ltd., Park Lane Business Park,
Kirkby-in-Ashfield, Nottinghamshire, NG17 9GU, UK*



TTS is part of the RM group

0800 318 686

www.tts-shopping.com